



# Installing vinyl railing on a ramp

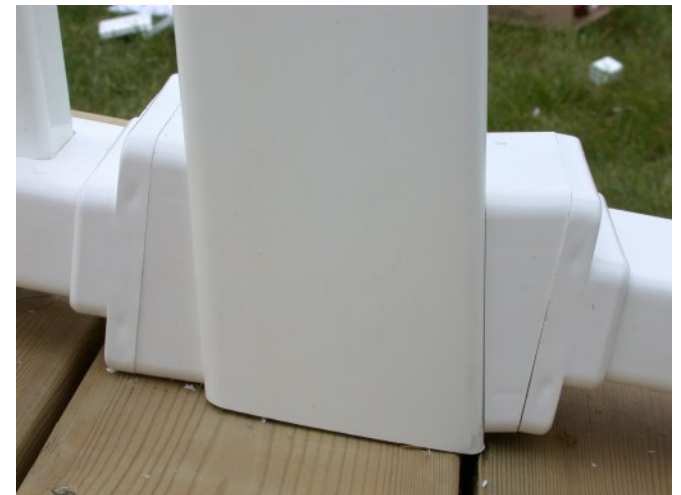

-finished assly using:

- Line (level) railing
- Line balusters
- Line connectors
- modified adapters
- modified post sleeve

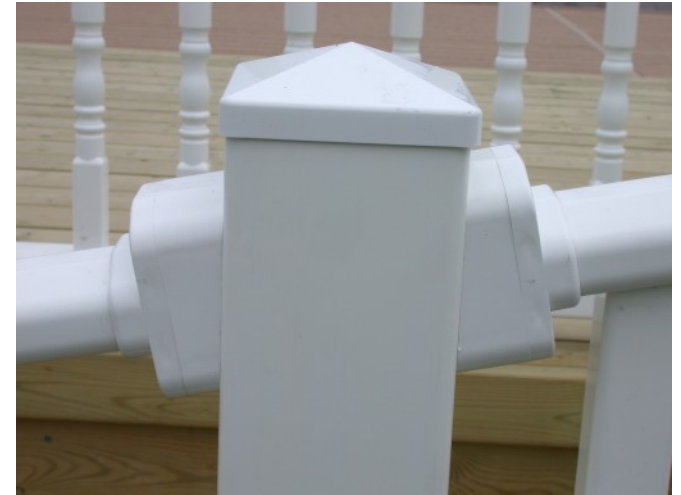

- use round column adapter set (A0AL3)
- cut back of adapter to match angle of ramp



-cut post sleeve  
to match angle  
of ramp



-locate position on post and mark/drill holes

-if using post anchors (P0SP1 or -4), bolt adapters and connector to vinyl post sleeve



-sleeve over wood post and screw connector/adaptor/rail assembly to post

OR

-use wedges to mount post anchor to ramp (ensure post anchors are plumb)



-most ramps are max  
5 degree slope

-this ramp is worst case,  
12 degree slope



Questions?

1-800-461-5706

